

Optional Ground Mounting Installation Instructions

Congratulations on your purchase, we hope it will provide years of effective service. Although mounting is not required, many customers need to have the option available. We include the materials & instructions at no additional cost.

Parts included: 2 washers, 2 lag bolts, 2 lag shields

Tools needed: 7/16 wrench or socket, drill with 1/2" masonry drill bit, Pencil or marker.

Step 1: Locate & mark the position of your urn.

Place the urn where you would like it to be. Remove the top & pail. Looking into the base, you will see mounting holes in each of the 4 corners. Only 2 positions need to be bolted. It is recommended that opposite corners be chosen. With a pencil or marker, mark 2 of the positions on the ground.




Step 2: Drill anchor holes & install anchors.

Move the base to one side, using a 1/2" drill bit drill a 1" deep hole at each of the marked points. Place a lag shield into each of the holes.

Step 3: position urn, install washers & bolts.

Place the base of the urn into position and install the washers & lag bolts. Be sure not to over tighten.

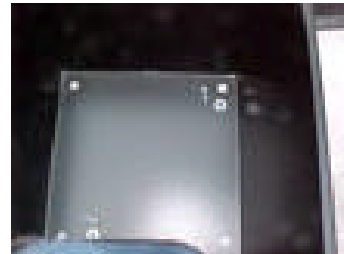

Step4: Check back in 4 months to empty pail.